

Superset 4025*
(SX-2000*)

Notice

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Corporation (MITEL). The information is subject to change without notice and should not be construed in any way as a commitment by MITEL or any of its affiliates or subsidiaries. MITEL and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate any such changes.

Nothing in this document may be reproduced in any manner, either wholly or in part for any use whatsoever, without written permission from Mitel Corporation.

* Trademark of MITEL Corporation
© Copyright 2000, MITEL Corporation
All rights reserved.
Printed in Canada.

Avis

Les informations contenues dans le présent document sont jugées exactes à tous égards mais ne sont pas garanties par Mitel S.C.C. (MITEL). Sujettes à modifications sans préavis, ces informations ne sauraient engager MITEL ni aucune de ses filiales ou affiliées. Mitel, ses filiales et affiliées déclinent toute responsabilité en cas d'erreur ou d'omission dans ce document. Le cas échéant, plusieurs révisions ou nouvelles éditions de ce document seront publiées en vue d'incorporer de telles modifications.

Toute reproduction totale ou partielle de ce document est interdite sans l'autorisation écrite expresse de Mitel S.C.C..

* Marques de commerce de MITEL S.C.C.
© Copyright 2000, MITEL S.C.C.
Tous droits réservés.
Imprimé au Canada.

Hinweis

Mitel Corporation (MITEL) hat sich in jeder Hinsicht um genaueste Angaben in diesem Dokument bemüht, kann hierfür jedoch keine Haftung übernehmen. Änderungen sind vorbehalten. Sie dürfen keinesfalls als Verpflichtung seitens MITEL oder eines der angeschlossenen Unternehmen oder Tochtergesellschaften ausgelegt werden. MITEL sowie die angeschlossenen Unternehmen und Tochtergesellschaften übernehmen keine Verantwortung für Fehler oder fehlende Erklärungen in diesem Dokument. Überarbeitungen dieses Dokuments oder neue Ausgaben können zum Zwecke etwaiger Änderungen herausgegeben werden.

Kein Teil dieses Dokumentes darf ohne schriftliche Genehmigung der Mitel Corporation in irgendeiner Form vervielfältigt werden, weder vollständig noch teilweise, egal für welchen Zweck.

* Warenzeichen der MITEL Corporation
©Copyright 2000, MITEL Corporation
Alle Rechte vorbehalten.
Gedruckt in Kanada.

Aviso

La información contenida en este documento se considera correcta en todos sus aspectos pero Mitel Corporation (MITEL) no puede garantizarla. La información está sujeta a cambios sin previo aviso y en ningún caso debe considerarse la existencia de ningún tipo de compromiso por parte de MITEL o cualquiera de sus empresas afiliadas o subsidiarias. MITEL y sus filiales y empresas subsidiarias declinan toda responsabilidad por cualquier error u omisión que pueda contener este documento. Pueden publicarse revisiones o nuevas ediciones de este documento para incorporar tales cambios.

Este documento no puede reproducirse, en parte o en su totalidad, por ningún medio y con ningún propósito, sin la autorización escrita de Mitel Corporation.

* Marca comercial de MITEL Corporation
©Copyright 2000, MITEL Corporation
Reservados todos los derechos.
Impreso en Canadá.

IMPORTANT! This telephone is NOT suitable for direct connection to the public-switched telephone network. Connect the telephone to a Mitel telephone system only.

IMPORTANT ! Ce poste téléphonique ne convient pas à la connexion au réseau téléphonique commuté public. Ne connectez ce poste téléphonique qu'à un système téléphonique Mitel.

IMPORTANTE: Este teléfono NO es apto para la conexión directa a la red telefónica pública. Debe conectarse únicamente a un sistema telefónico Mitel.

Table of Contents

ABOUT YOUR PHONE	2
CUSTOMIZING YOUR PHONE	4
Ringer Control	4
Handset Receiver Volume Control	4
Speaker Volume Control	4
Display Contrast Control	4
Language Change	4
MAKING AND ANSWERING CALLS	5
Phonebook	5
Redial	5
Speed Call Keys	6
Speed Call - Personal	6
Handsfree Operation	7
Auto-Answer	7
CALL HANDLING	8
Hold	8
Transfer	8
Conference	8
Conference Split	9
Add Held	9
Swap	9
Call Forward	9
USING ADVANCED FEATURES	10
Do Not Disturb	10
Direct Paging	10
Reminder	11
Headset Operation	12
Music	12
Feature Access Codes	13

ABOUT YOUR PHONE

The SUPERSET 4025 has ten fixed-function keys (**SUPERKEY**, **TRANS/CONF**, **REDIAL**, **MESSAGE**, **HOLD**, **CANCEL**, **SPEAKER**, **MICROPHONE**, **Δ**, and **∇**) and 14 personal keys with built-in status indicators. The personal key on the bottom right is always your Prime Line; the remaining personal keys can be programmed as Feature, Speed Call, or Line Appearance keys. See *Feature Keys* for personal key programming instructions.

Personal Keys can be programmed as Feature Keys (such as **Swap** key) by you or by your Administrator.

Your telephone also features three softkeys for feature access, an alphanumeric liquid crystal display (LCD) with contrast control, Handsfree operation, and a Message Indicator.

Note: When using the SuperKey, press Cancel to back up one menu level.

IMPORTANT NOTE FOR HEADSET USERS:

Mitel Headsets with Feature Control Switch (PN9132-800-500-NA/9132-800-501-NA) must be installed in the dedicated headset jack (the jack nearest the front of the set). Installation will disable your handset microphone. Disconnecting the headset at the jack or at the quick-disconnect plug restores handset operation.

Telephone status indicators

When line is:	the indicator is:
Idle	Off
Busy	On
Ringing	Flashing slowly
On hold at your set	Flashing rapidly
On hold at another set	Flashing slow on/fast off

TIPS FOR YOUR COMFORT AND SAFETY

Don't cradle the handset!

Prolonged use of the handset can lead to neck, shoulder, or back discomfort, especially if you cradle the handset between your ear and shoulder. If you use your phone a lot, you may find it more comfortable to use a headset. See the section on headset usage elsewhere in this guide for more information.

Protect your hearing


Your phone has a control for adjusting the volume of the handset receiver or headset. Because continuous exposure to loud sounds can contribute to hearing loss, keep the volume at a moderate level.

Adjusting the viewing angle


The stand built into your phone tilts to give you a better view of the keys and display.

To tilt your telephone for better viewing:

- Press the tilt-release paddle on the telephone base.
- Tilt your telephone to the desired angle.
- Release the tilt-release paddle.

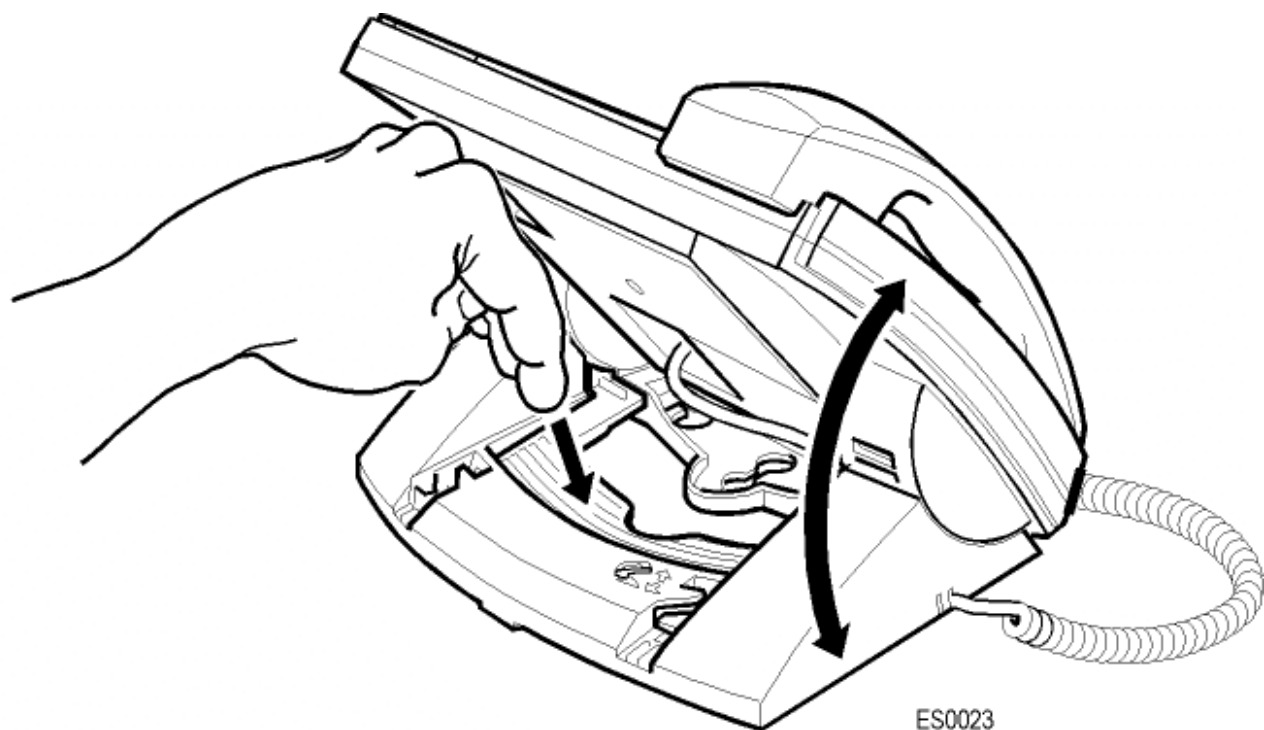

ES0023

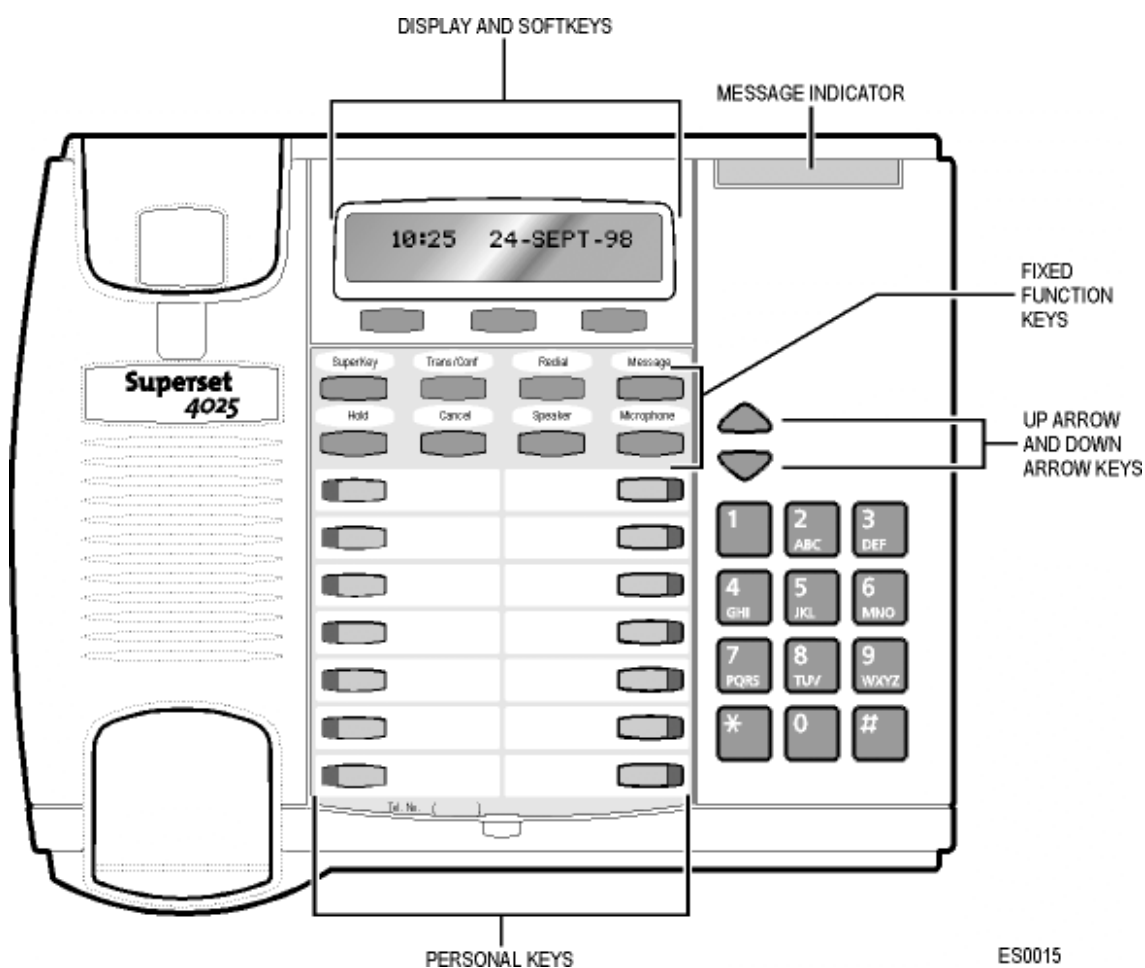

ES0015

CUSTOMIZING YOUR PHONE

Ringer Control

To adjust the Ringer Volume while the set is ringing:

- Press **Δ** or **∇**.

To adjust the Ringer Pitch while the set is idle:

- Press **SUPERKEY**.
- Press the **No** softkey until "Ringer Adjust?" appears.
- Press the **Yes** softkey.
- Press the **Yes** softkey.
- Press **Δ** or **∇**.
- Press **SUPERKEY**.

Handset Receiver Volume Control

To adjust the Handset Receiver Volume when you are using the handset:

- Press **Δ** or **∇**.

Speaker Volume Control

To adjust the Speaker Volume during a Handsfree conversation:

- Press **Δ** or **∇**.

Display Contrast Control

To adjust the Display Contrast while your set is idle:

- Press **Δ** or **∇**.

Language Change

To change the display language:

- Press **SUPERKEY**.
- Press the **No** softkey until "Language?" appears.
- Press the **Yes** softkey.
- Press the **Change** softkey.

- Press the **No** softkey until the desired language appears.
- Press the **Yes** softkey.

MAKING AND ANSWERING CALLS

To make a call:

- Lift the handset.
- If you want to use a Non-Prime Line, press a Line Appearance key.
- Dial 9 + the number.
–or–
Press a Speed Call key.
–or–
Press **REDIAL**.

To answer a call:

- Lift the handset.
–or–
Press the flashing Line Appearance key and lift the handset.

Phonebook

For each letter in the name, press the appropriate key on the keypad until the letter is shown in the display; for example, if the letter C is required, press the digit 2 three times. Use the ← softkey to correct errors. If the next letter in a name is on the same key as the previous letter, press the → softkey before proceeding. If required, use the → softkey to add a space between the first and last name.

To use Phonebook:

- Press the **Phonebook** softkey.
- Enter the name of the desired party.
- Press the **Lookup** softkey.
- If no match exists, edit the original entry.
- If the name is not unique, press the **Next** softkey.
- Do one of the following:
 - To make the call, press the **Call** softkey.
 - To edit the entry, press the **Retry** softkey.
 - To exit, press **SUPERKEY**.

Redial

To redial the last number that you manually dialed:

- Lift the handset.
- Press **REDIAL**.

Speed Call Keys

You may use Speed Call Keys to make a call or to send a string of digits during a call (press a Speed Call Key during a call to send a multi-digit password, for instance).

To dial a stored Speed Call number:

- Lift the handset.
- Press a Speed Call key.

To store a Speed Call number:

- Press **SUPERKEY**.
- Press the **No** softkey until "Personal Keys?" appears.
- Press the **Yes** softkey.
- Press a personal key that isn't a line key.
- Press the **Change** softkey.
- Press the **Yes** softkey.
- Do one of the following:
 - To enter a new number, dial the number.
Press **HOLD** between digits to create a pause during dialing – press **HOLD** more than once to lengthen the pause.
To enter a trunk flash, press **TRANS/CONF**. (See "Trunk Flash" for more information about the use of this feature.)
 - To enter the last number dialed, press **REDIAL**.
- If you want the number to be private, press the **Priv** softkey.
- Press the **Save** softkey.
- Press **SUPERKEY**.

Handsfree Operation

To use Handsfree Operation to make calls:

- If you want to use a Non-Prime Line, press a Line Appearance key.
- Dial the number.
- Communicate by using the speaker and the microphone.

To use Handsfree Operation to answer calls:

- Press the flashing line key.
- Communicate by using the speaker and the microphone.

To hang up while using Handsfree Operation:

- Press **SPEAKER**.

To temporarily disable the microphone during Handsfree Operation:

- Press **MICROPHONE** (the microphone LED turns off).

To re-enable the microphone and return to the conversation:

- Press **MICROPHONE** (the microphone LED turns on).

To disable Handsfree Operation:

- Lift the handset.

To return to Handsfree Operation:

- Press **SPEAKER**.
- Hang up.

Auto-Answer (Do Not Use this Feature!)

To enable or disable Auto-Answer:

- Press **SUPERKEY**.
- Press the **No** softkey until "Auto Answer?" appears.
- Do one of the following:
 - To enable Auto-Answer, press the **TurnOn** softkey.
 - To disable Auto-Answer, press the **TurnOff** softkey.

To answer a call when you hear ringback:

- Communicate by using the speaker and the microphone

To terminate a call:

- Press **CANCEL**.
–or–
Wait for the caller to hang up.

CALL HANDLING

Hold

To place a call on Hold:

- Press **HOLD**.

To retrieve a call from Hold:

- Lift the handset.
- Press the flashing line key.

Transfer

To Transfer an active call:

- Press **TRANS/CONF**.
- Dial the number of the third party.
- Do one of the following:
 - To complete the Transfer, hang up.
 - To announce the Transfer, wait for an answer, consult, and hang up.
 - To cancel the Transfer, press **CANCEL**.

Conference

To form a Conference when a two-party call is already in place, or to add another party to an existing Conference:

- Press **TRANS/CONF**.
- Dial the number of the next party.
- Wait for an answer.
- Press **TRANS/CONF**.

To leave a Conference:

- Hang up.

Conference Split

To Split a Conference and speak privately with the original party:

- Press the **Split** softkey.

Add Held

To move a call on Hold to another line appearance:

- Press the available line key.
- Press the **Addheld** softkey.
- Press the flashing line key.

To add a call on Hold to an existing conversation or conference:

- Press the **Addheld** softkey.
- Press the flashing line key.

Swap

To call another party when you are in an established two-party call:

- Press **TRANS/CONF**.
- Dial the number.

To alternate between the two parties:

- Press the **Trade** softkey.

Call Forward

Call Forward lets you redirect incoming calls to an alternate number. Always redirects all incoming calls regardless of the state of your telephone. B-Int redirects internal calls when your telephone is busy, and B-Ext redirects external calls when your telephone is busy. NA-Int redirects internal calls after several rings if you don't answer, and NA-Ext redirects external calls after several rings if you don't answer.

Note: For information about "I Am Here", see Call Forward - Remote.

To program Call Forward:

- Press **SUPERKEY**.
- Press the **No** softkey until "Call Forwarding?" appears.
- Press the **Yes** softkey.
- Press the **Next** softkey until the type of Call Forward appears (see above).
- Press the **Review** softkey.
- If a number is already programmed, press the **Change** softkey.
- Press the **Program** softkey.
- Dial the destination number.
- Press the **Save** softkey.

To turn Call Forward on and off (once it has been programmed):

- Press **SUPERKEY**.
- Press the **No** softkey until "Call Forwarding?" appears.
- Press the **Yes** softkey.
- Press the **Next** softkey until the type of Call Forward appears.
- Press the **Review** softkey.
- Press the **Change** softkey.
- Do one of the following:
 - To turn Call Forward on, press the **TurnOn** softkey.
 - To turn Call Forward off, press the **TurnOff** softkey.

USING ADVANCED FEATURES

Do Not Disturb

To activate or deactivate Do Not Disturb:

- Press the **Do Not Disturb** feature key.

Direct Paging

Direct Paging allows you to page a party through their telephone speaker. If the paged party has Off-Hook Voice Announce enabled, the page will be heard even when the party is on a handset or headset call.

To page a party:

- Lift the handset or press microphone.
- Press the **Direct Paging** feature key.
- Dial the extension number.
- Speak to the dialed party after the tone.

If Handsfree Answerback has been turned on at your set and you receive a Direct Page while your set is idle, or while you are on a handset or headset call, a handsfree call will automatically be established after a single burst of tone.

The following instructions assume that Handsfree Answerback is not enabled on your set.

To answer a Direct Page (indicated by a single burst of tone):

- Lift handset.
- or -
Press **MICROPHONE**.

To answer a page while using the handset:

- Press **MICROPHONE**.

To enable or disable Handsfree Answerback:

- Press **MICROPHONE** while the set is idle.

Reminder

To program a Reminder:

- Press **SUPERKEY**.
- Press the **No** softkey until "Timed Reminder?" appears.
- Press the **Yes** softkey.
- Enter the time in 24-hour format.
- Press the **Save** softkey.

To view, change, and/or cancel a pending Reminder:

- Press **SUPERKEY**.
- Press the **No** softkey until "Timed Reminder?" appears.
- Press the **Yes** softkey.
- Do one of the following:
 - To change the Reminder, press the **Change** softkey, enter the new time, and press the **Save** softkey.
 - To cancel the Reminder, press the **Clear** softkey.
 - To exit without canceling the Reminder, press **SUPERKEY**.

To acknowledge a Reminder when your set rings once:

- Press the **Confirm** softkey.

Headset Operation

To enable Headset Operation:

- Press the **Headset** feature key.

To answer a call (when Auto Answer is disabled):

- Press the flashing line key.

To hang up:

- Press **CANCEL**.

To disable Headset Operation:

- Press the **Headset** feature key.

Music

To turn Music on and off when the set is idle:

- Press **SUPERKEY**.
- Press the **No** softkey until "Music?" appears.
- Do one of the following:
 - To turn the music on, press the **TurnOn** softkey.
 - To turn the music off, press the **TurnOff** softkey.
- Press **SUPERKEY**.

